



= BFT Alpha Control Board .

= Power: 220V

= DIP Switch Function

= Receiver Configuration